


First of all, DPF soot level reset and adblue volume reset will be done when the vehicle is in the original. Then the emulator will be installed. Sockets will be pulled after emulator assembly.

Emulator side	Vehicle side
RED	To the Contact Line
BLACK	Chassis
YELLOW	Black and White Cable
GREEN	Pink White
WHITE	Brown
BROWN	To the White Wire

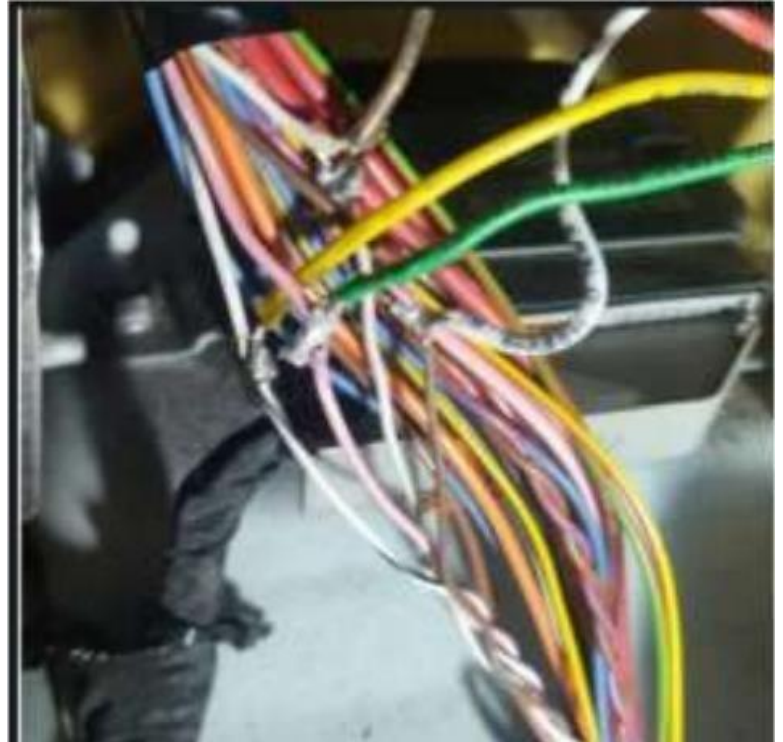



Pull out PM sensor and downstream NOX sensor



Unplug the Adblue pump



Adblue Pump

Model

- id-v5
- id-v6
- id-v5,5
- id-v6,2

Input: 12-24V

- POWER (+)
- POWER (-)

- CAN LOW
- CAN HIGH

- CAN LOW
- CAN HIGH

- CAN LOW
- CAN HIGH